
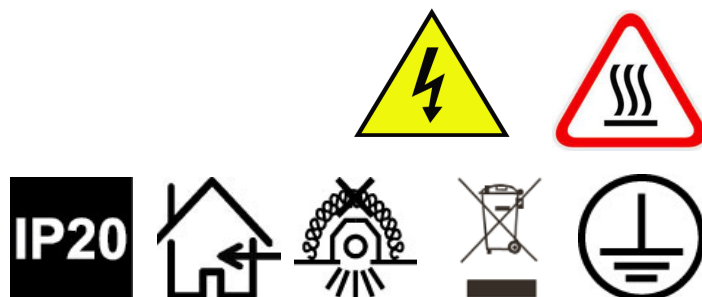


Track Lights

INSTALLATION MANUAL

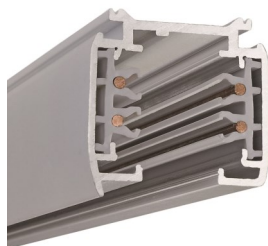

Class II


- The luminaires are electrically insulated and provided with a connection to earth.
- Earthing protects exposed metal parts that could become live in the event of basic insulation failure.

Installation Requirements


- This light fixture must be supplied with 220-230V, 50Hz AC power.
- Connect to an individual branch circuit.
- LLSA ensures a 2 kV surge protection on our PSU, anything out of this range will void warranty provided.
- Improper installation might cause an electric shock accident.
- Use an authorized electrical professionals to do the installation, repair and maintenance of the light fixture.
- Cut off the power before and during installation, maintenance and repair of the light fixture.
- Do not install the light fixture on top of or near hot objects to avoid damage. (For example hot gas pipes, exhaust funnels or stoves)
- Do not install the light fixture in a damp area or where liquid leakage is potential.
- Make sure no fire regulations are violated.
- Do not look directly at the light fixture for a long period of time to avoid eye damage.
- The use of third party equipment is not recommended by the manufacturer for it may lead to warranty void.
- Do not cover the lamp with heat insulating gasket or similar material.
- Caution hot surface! Light fixture should be switched off and allowed to cool down before handling.
- Track luminaires with power levels of 40W must be installed at a mounting height of 3m or higher.
- The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.

Cleaning and Maintenance of Enclosure


- Do not use solvent-based cleaning agents, this will cause cracks to form in the plastic diffuser covers.
- Clean with a damp cloth and silicone-based cleaning agent. (Such as Mr Min)

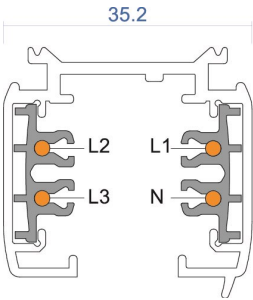


ACC_TLA_EURO



ACC_TLA_EURO_*
Track Light Adapter




ACC_E_T_L_F*_L
Live End Cap, Left



ACC_E_T_L_F*_R
Live End Cap, Right




ACC_E_T_E_C_*
End Cap




ACC_E_T_L_F*_L
Live End Cap, Left


ACC_E_T_L_F*_R
Live End Cap, Right




ACC_E_T_F_B_*
Flexible Connector




ACC_E_T_T_L_C_*
Twisted L Connector

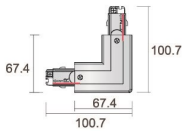


ACC_E_T_L_C_*
L Connector

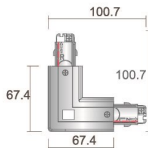


ACC_E_T_L_C*_L
L Connector, Left
ACC_E_T_L_C*_R
L Connector, Right




ACC_E_T_L_C*_R
L Connector, Right
ACC_E_T_L_C*_L
L Connector, Right

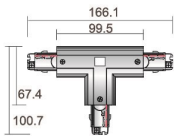


ACC_E_T_T_C_*
T Connector, Universal




ACC_E_T_X_C_*
X Connector




ACC_E_T_I_C_M*_I
I Connector Mini, Insulated




ACC_E_T_I_C_*
I Connector




ACC_E_T_I_C_*
I Connector




ACC_E_T_I_C_M_*
I Connector Mini




ACC_E_T_T_B_E_W_*
EZ-Click



ACC_T_S_K_W_*
Suspension Kit, M61.5m Wire Rope



ACC_T_S_K_R_*
Suspension Kit, M6x1m



ACC_E_T_S_W_*
Suspension, 3.5m Wire Rope

NOTES FOR ALL INSTALLATIONS

- Use appropriate machinery to cut track lengths. Always properly clean out any material shavings and or burrs. Ensure a proper 90° angle cut for correct electrical alignment (Fig. 1).
- Never extend lengths past 2000mm (2m) and never exceed weight of 10kg of fittings per length (Fig. 2).

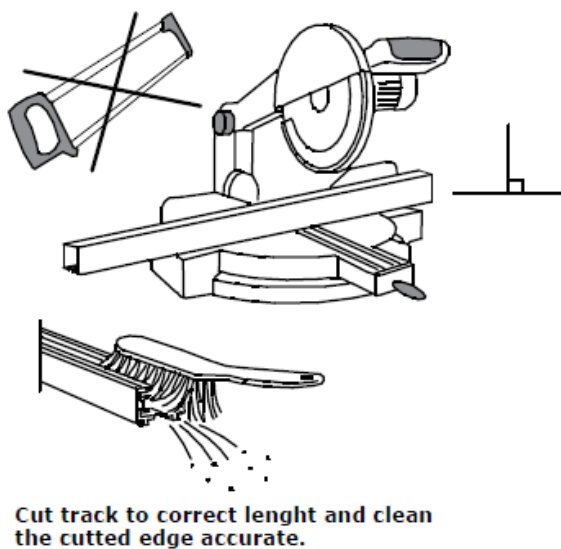


FIG. 1

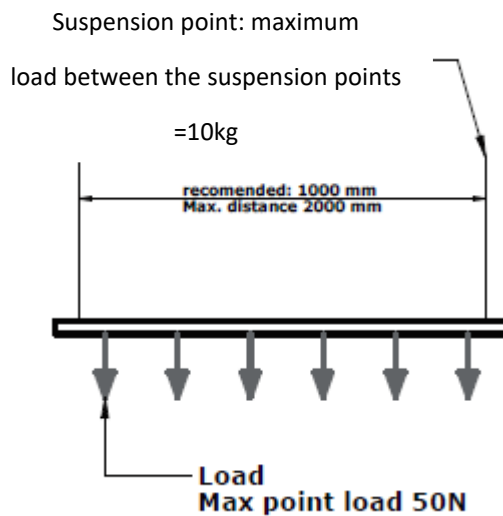


FIG. 2

- Universal L and T connectors makes polarity within shapes of track possible. Follow instructions carefully.
- Unscrew the screws of the cover and remove the cover.
- For L connector: turn 180°. For T connector: turn 90°.
- Fasten the cover with the screws again.
- **Never leave track open ended, always close off with an endcap.**



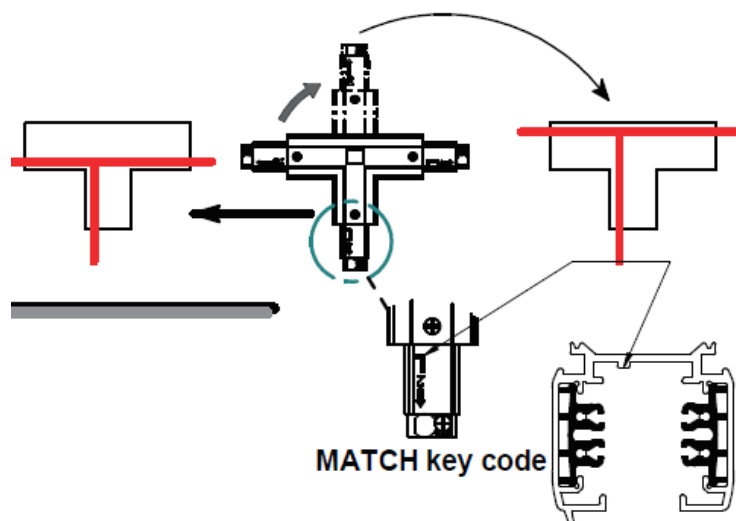


FIG. 3


Instructions (steps to follow)

- Suspension / Surface mounting

- Ensure you have the correct, specified connectors, brackets and joins as requested.
- Insert the join and place the suspension bracket over the join for rigidity as in Fig. 4.

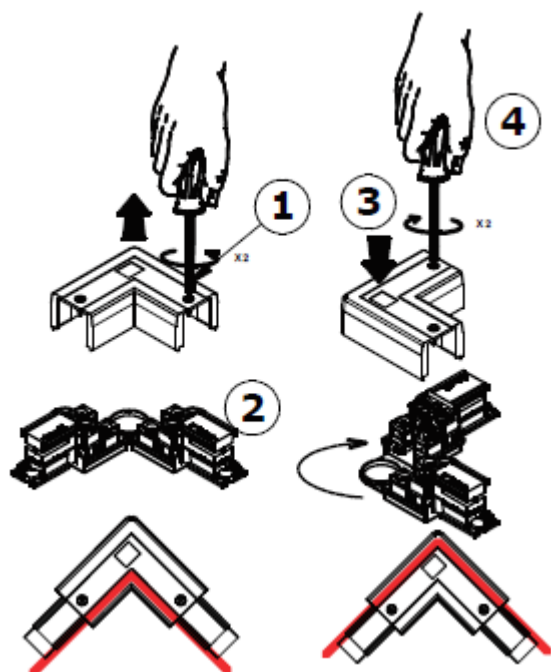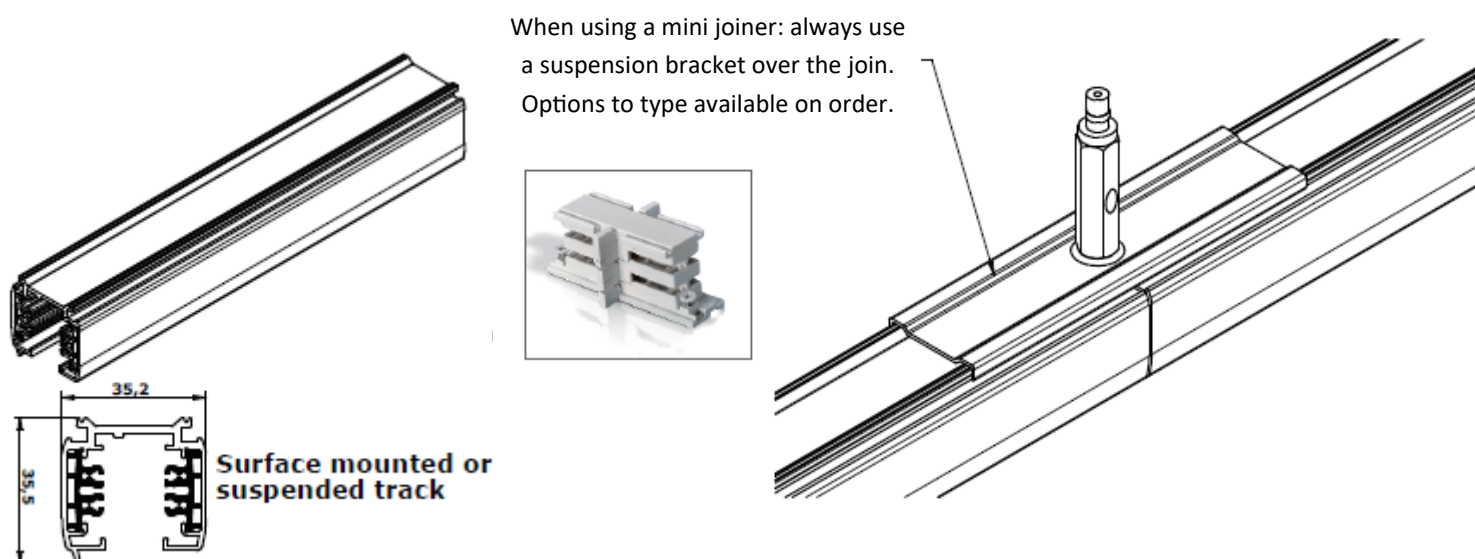


- To make use of the EZ Click suspension bracket, follow Fig. 5.

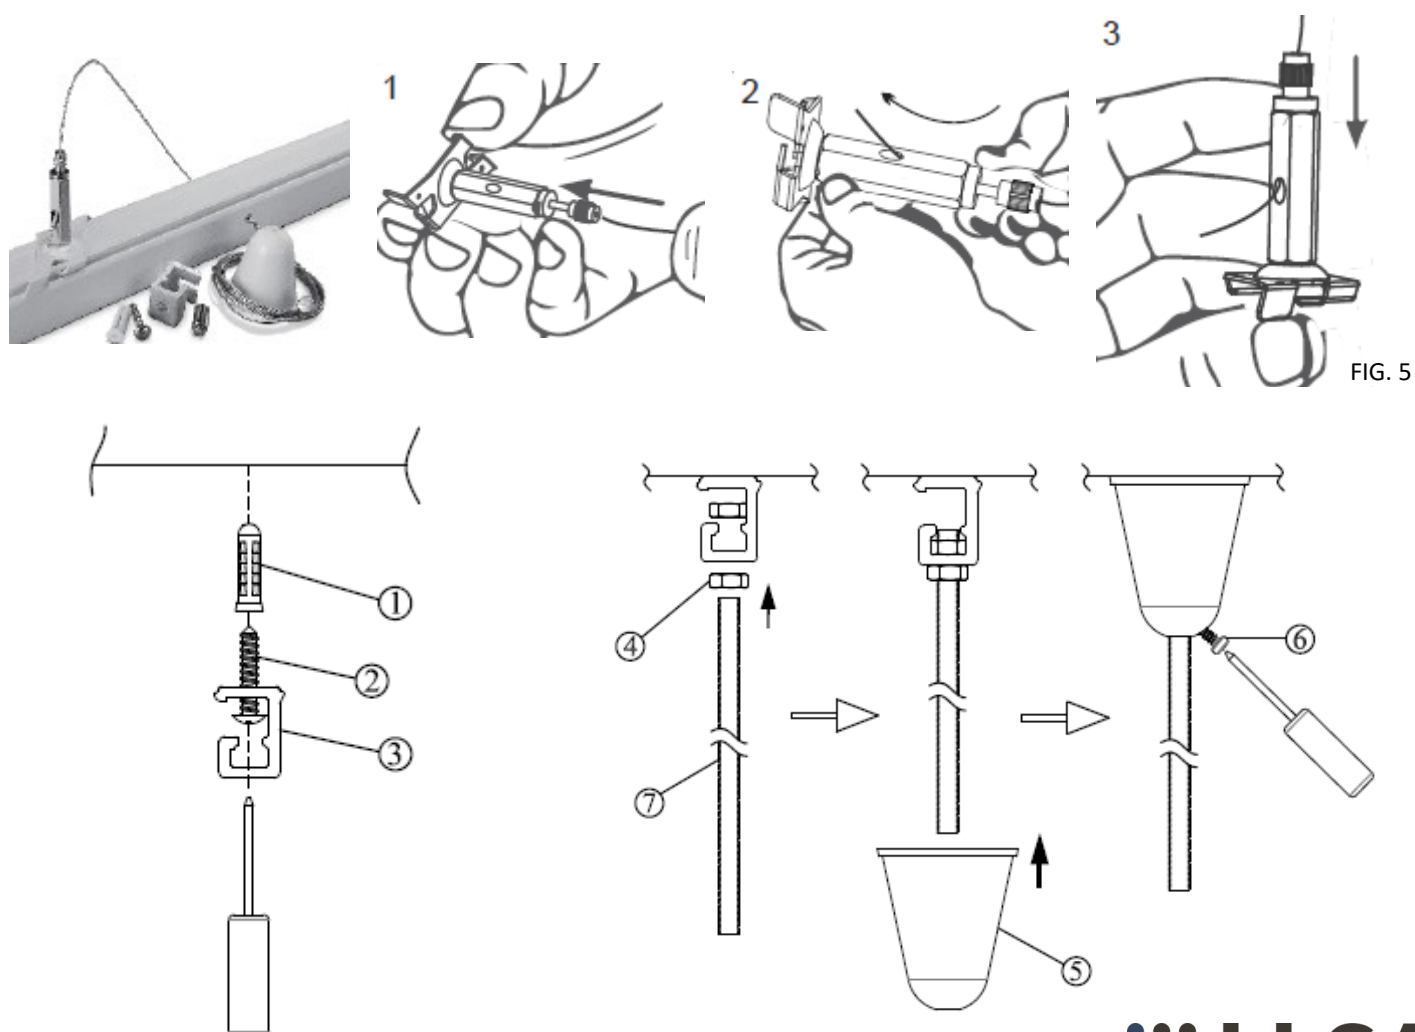

Instructions (steps to follow) inserting a track fitting: - TL 31

- Turn off power to track before installation.
- Turn the track adaptor to 'OFF' and lock the lever/buckle in the position shown in Fig. 6

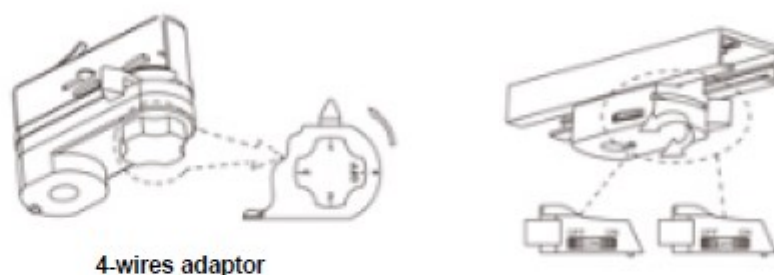

4-wires adaptor

FIG. 6

- Pay attention to the track direction and match the light fitting orientation.
- Insert the fitting into the track (Fig. 6).
- Secure the fitting into the track with the buckles (Fig. 7).

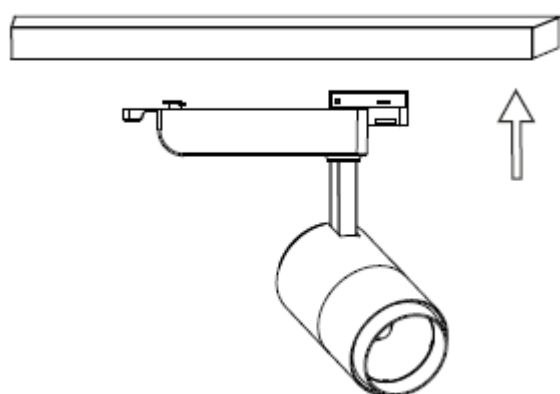


FIG. 6

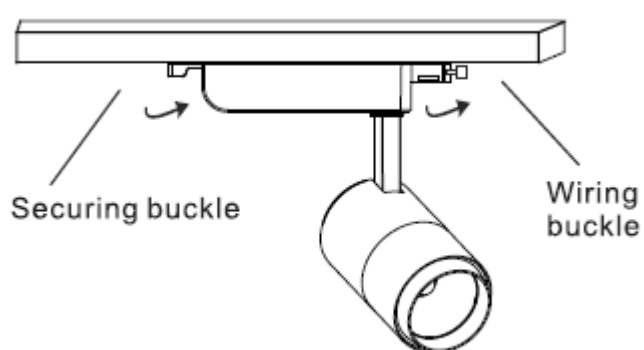


FIG. 7

TL 34 / TL 27 / TL Linear

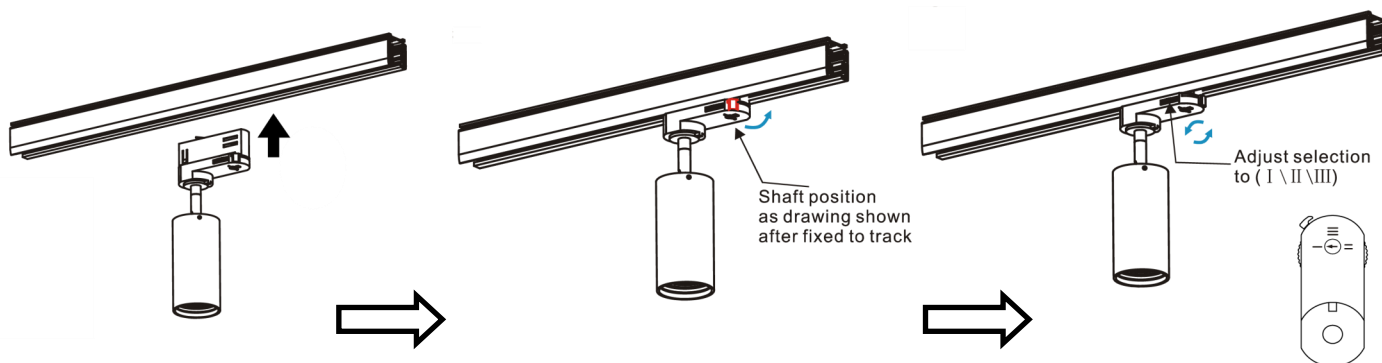


FIG. 8

Instructions (steps to follow)

- T-grid ceiling

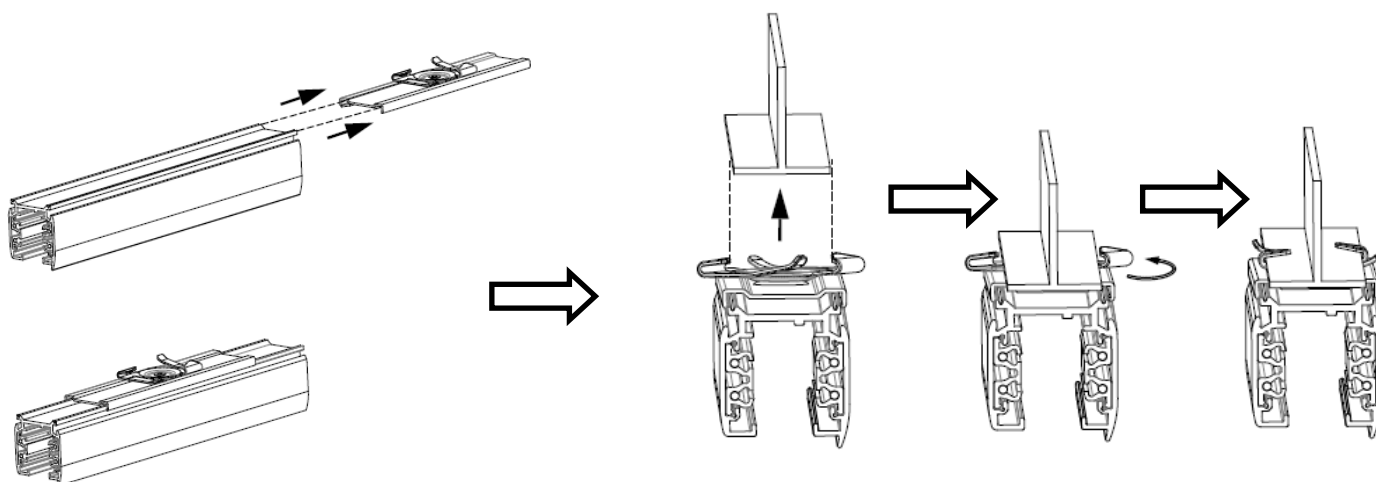


FIG. 9